



Installation Guide for Brick

IMPORTANT:
Always refer to house wrap or building paper manufacturers install guidelines.

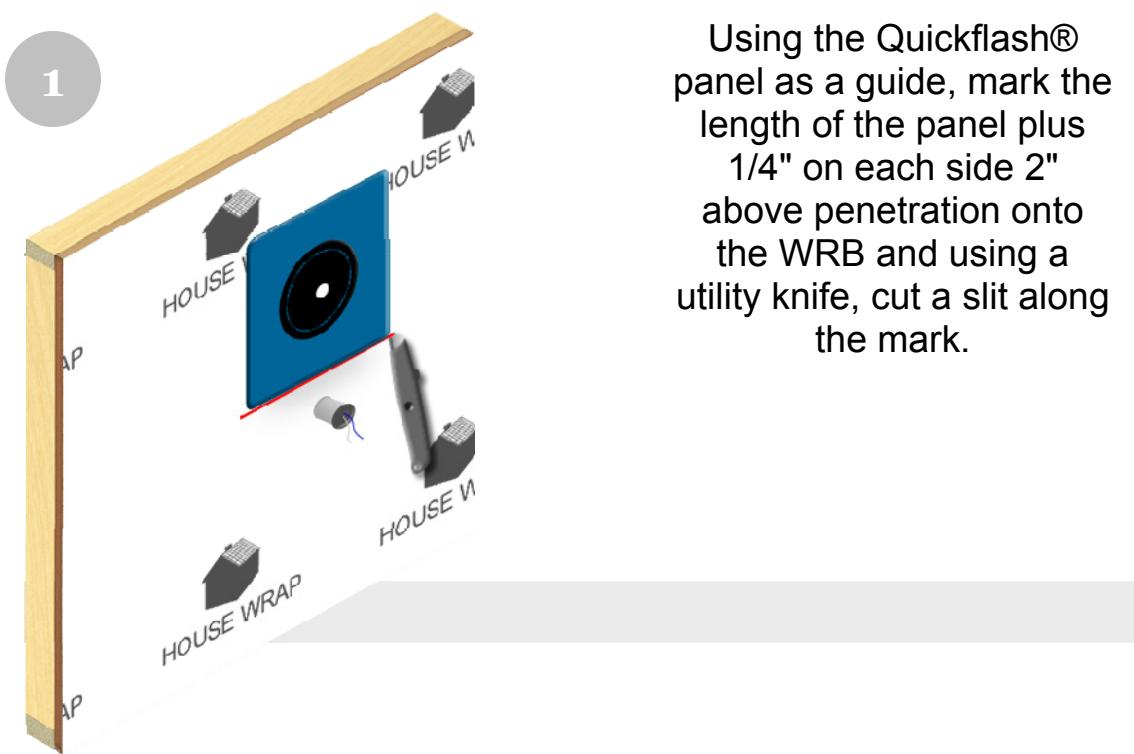


Using the Quickflash® panel as a guide, mark the length of the panel plus 1/4" on each side 2" above penetration onto the WRB and using a utility knife, cut a slit along the mark.


2

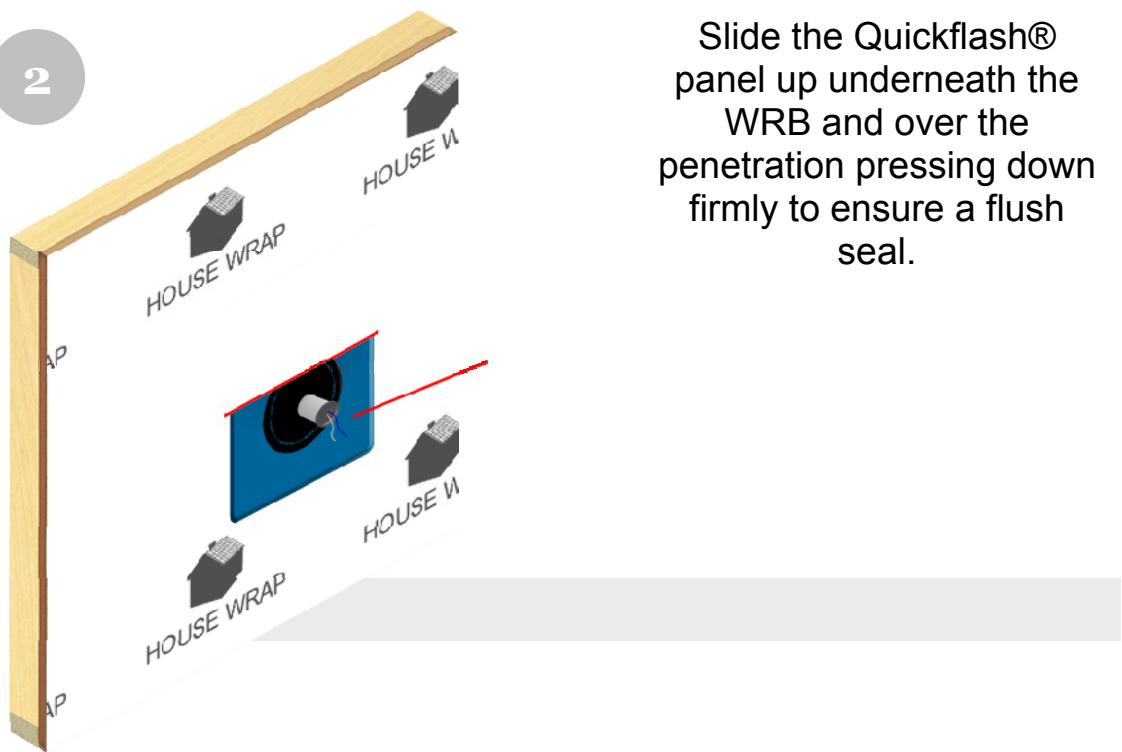

3

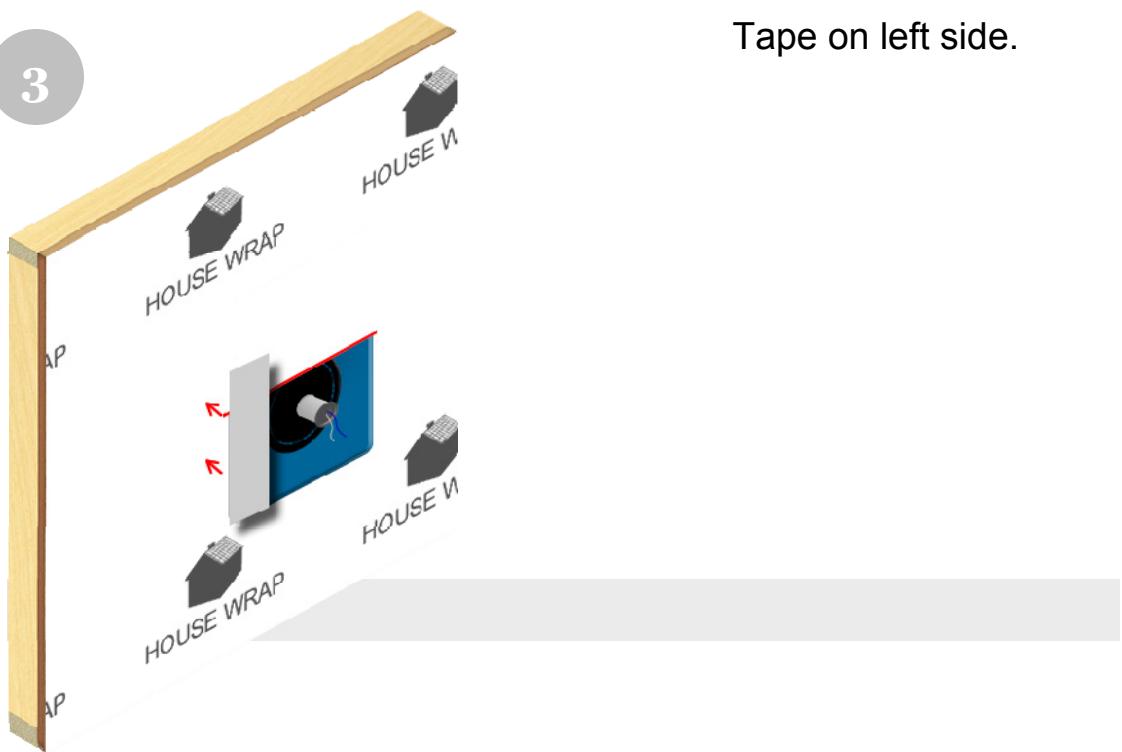


4

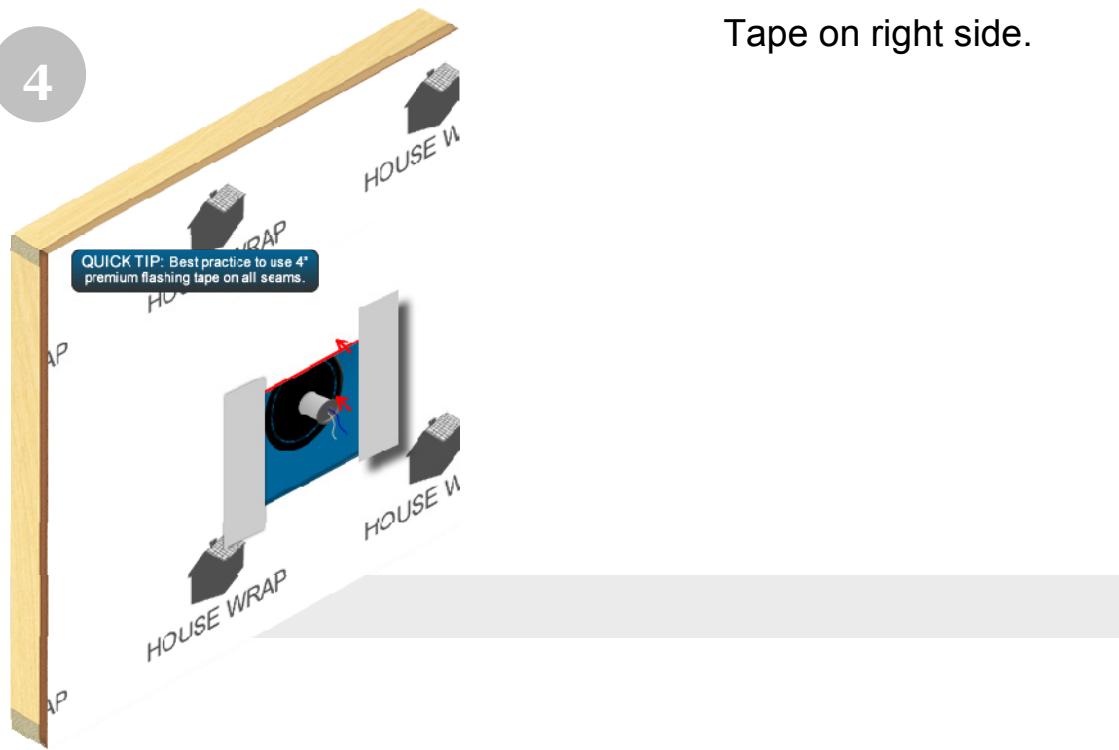


Tape on right side.

5

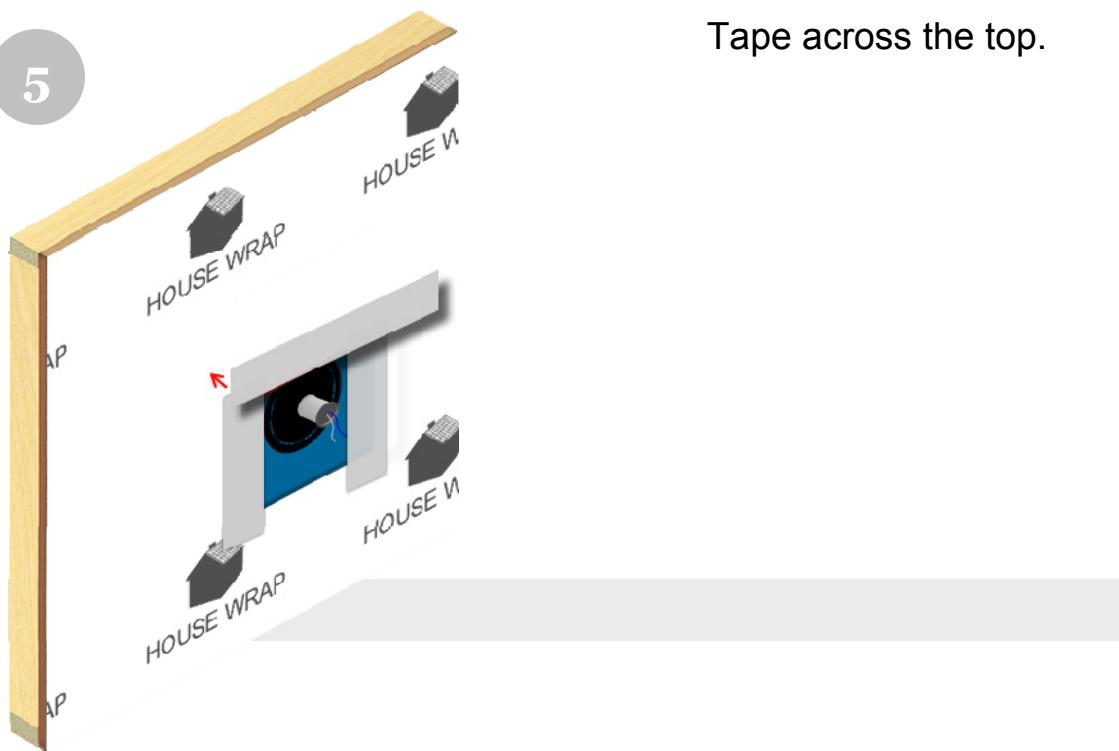

Tape across the top.

6

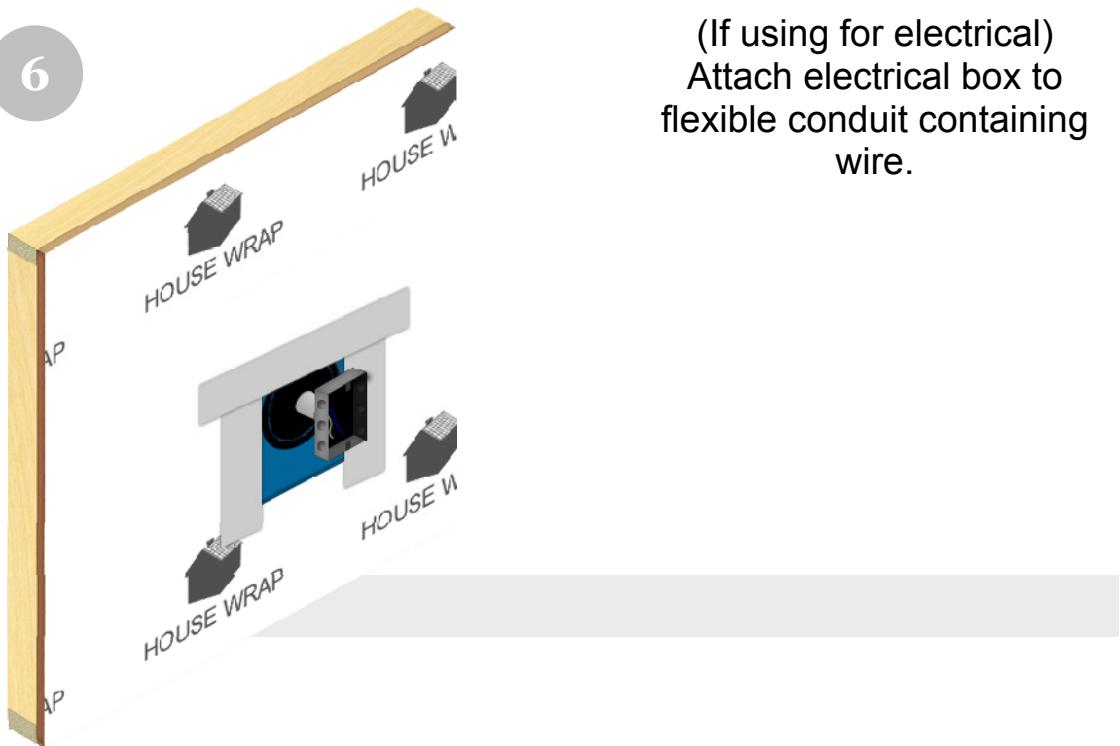

7

