





Installation Electrical (Pre WRB)

IMPORTANT:
**Always refer to house
wrap or building paper
manufacturers install
guidelines.**

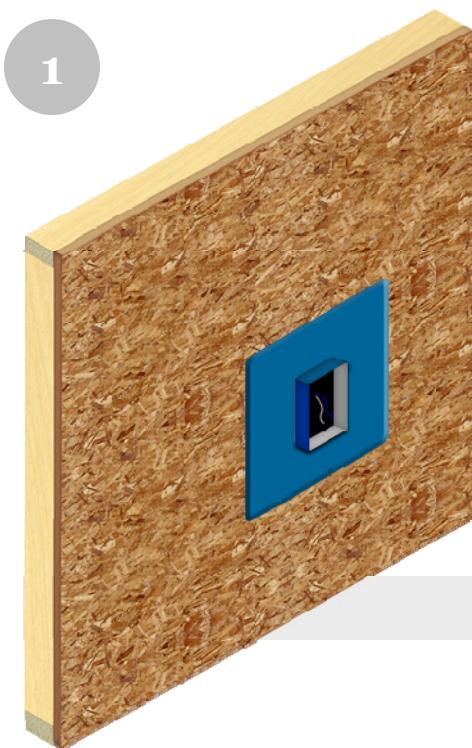

Slide Quickflash® panel
onto electrical box firmly
pressing panel against the
wall or studs.

2

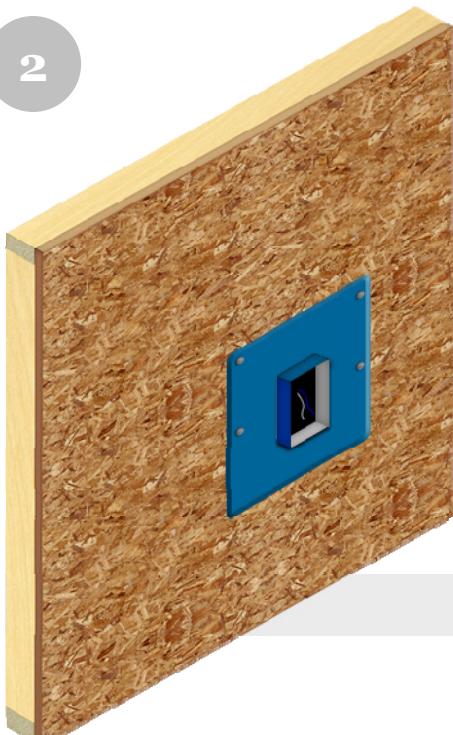


Using non-corrosive fasteners, secure the Quickflash® panel to the structure from the mid-point of the panel to the top.

3



Slide the weather resistant barrier underneath the Quickflash® panel to the bottom of the electrical box.

4

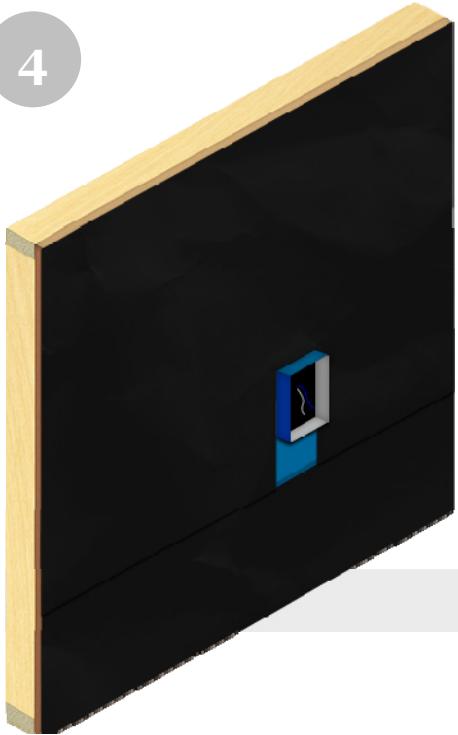

Install the weather
resistant barrier carefully
cutting an opening around
the protruding electrical
box, over the top of
Quickflash® panel using
shingle style method
extending to the bottom of
flashing panel or further.