


# Installation A/C Line Set (Post WRB)

**IMPORTANT:**  
Always refer to house  
wrap or building paper  
manufacturers install  
guidelines.




1

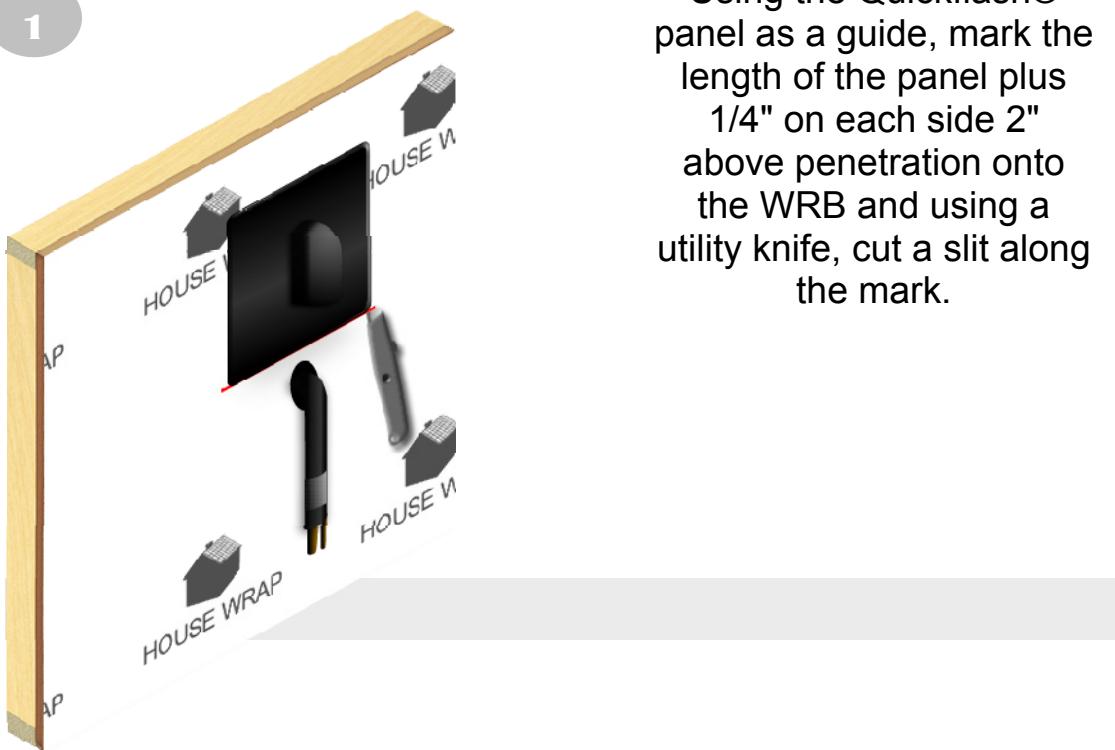


Using the Quickflash® panel as a guide, mark the length of the panel plus 1/4" on each side 2" above penetration onto the WRB and using a utility knife, cut a slit along the mark.

2

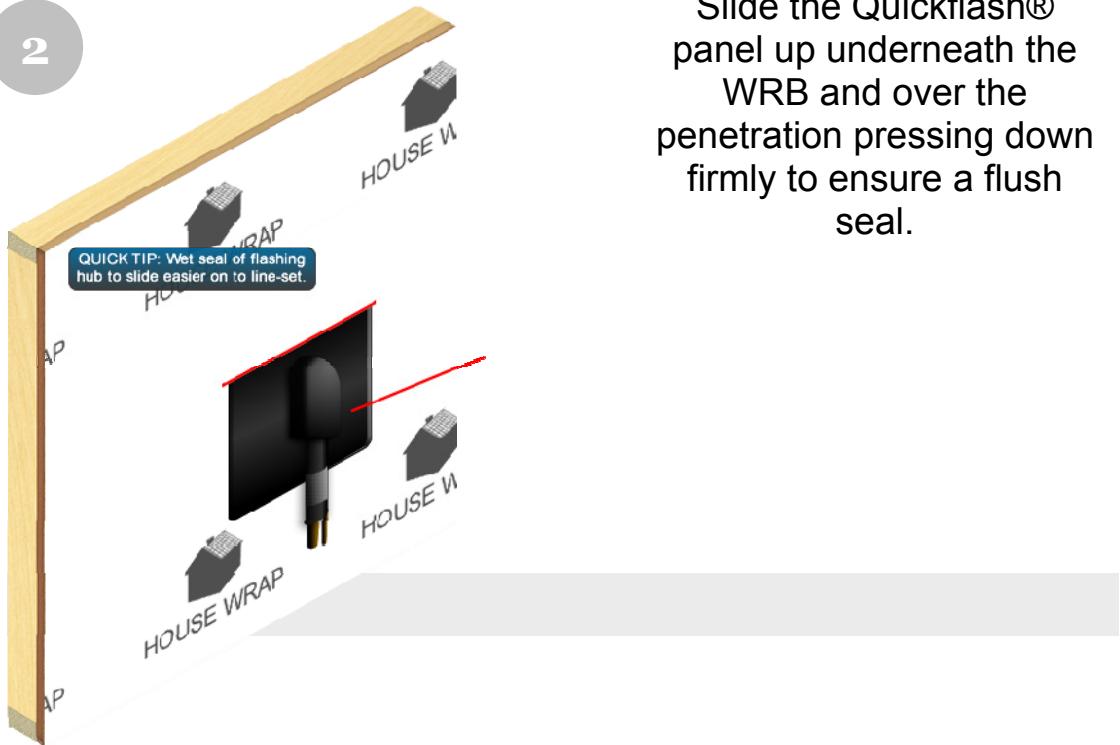


Slide the Quickflash® panel up underneath the WRB and over the penetration pressing down firmly to ensure a flush seal.


3

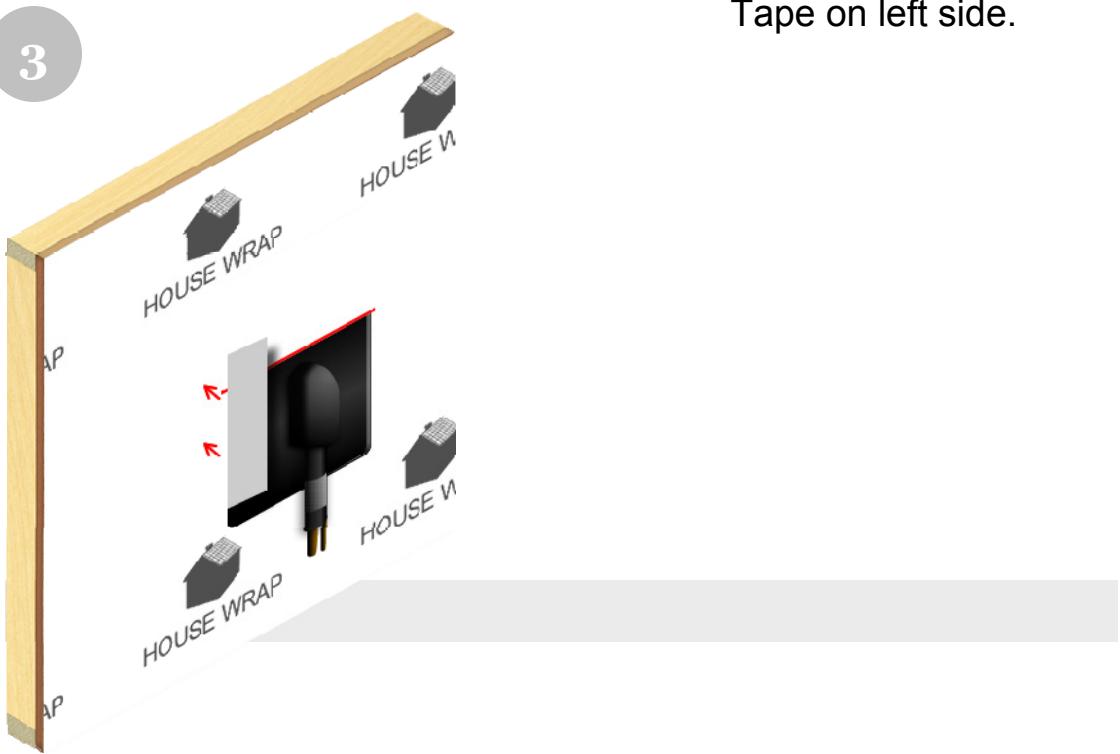


4

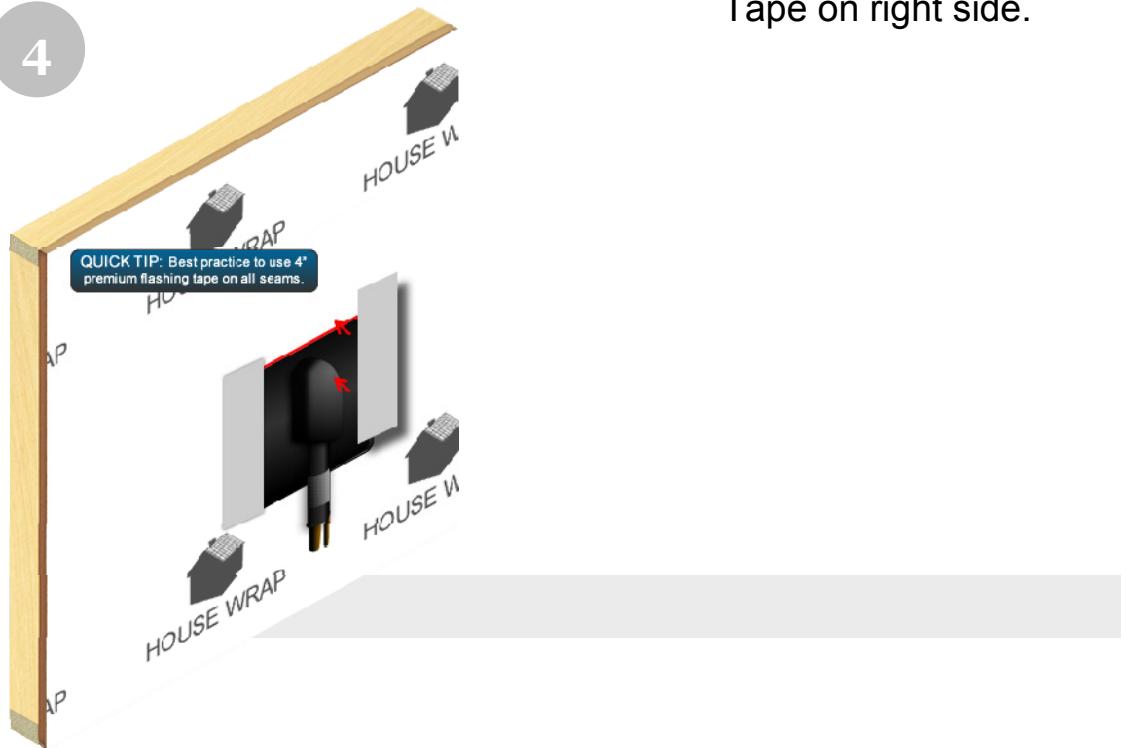

5

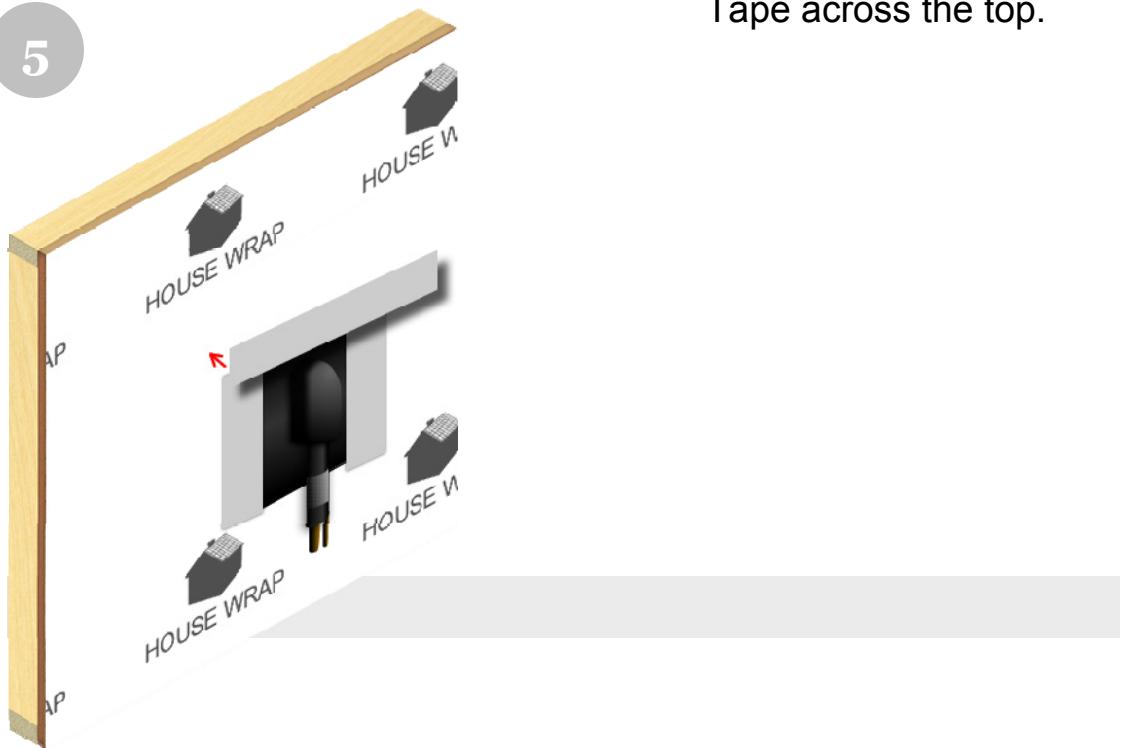

6

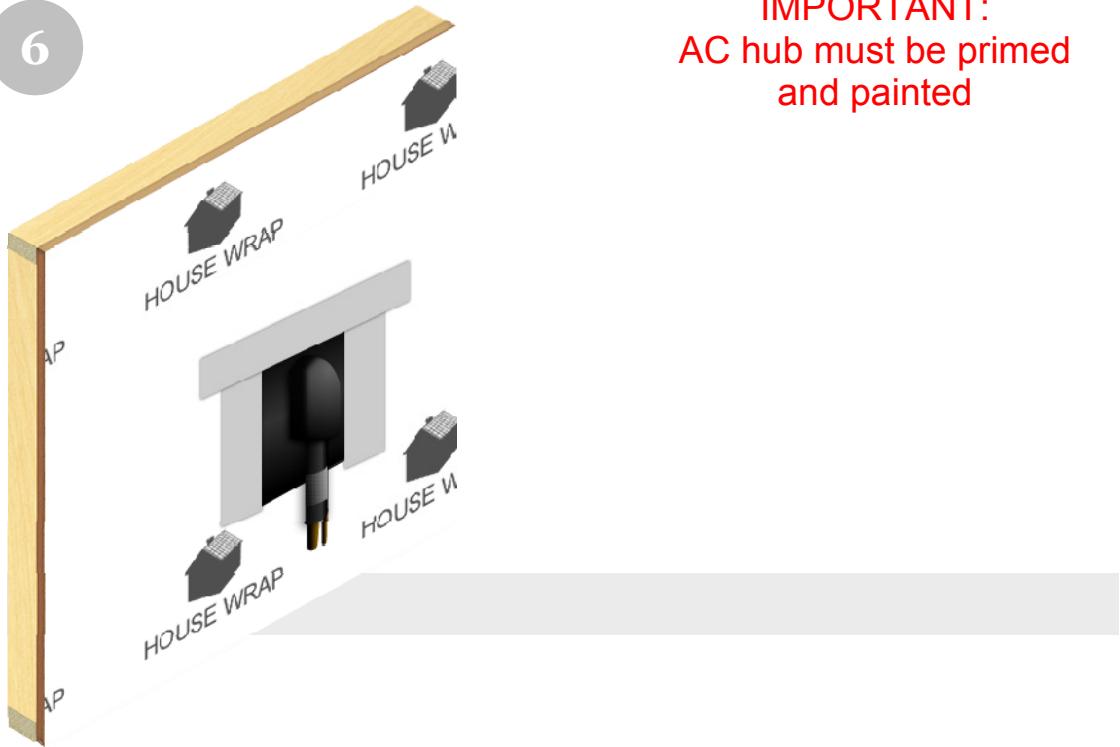

**IMPORTANT:**  
AC hub must be primed  
and painted