




# Installation A/C Line Set (Pre WRB)

**IMPORTANT:**  
**Always refer to house  
wrap or building paper  
manufacturers install  
guidelines.**

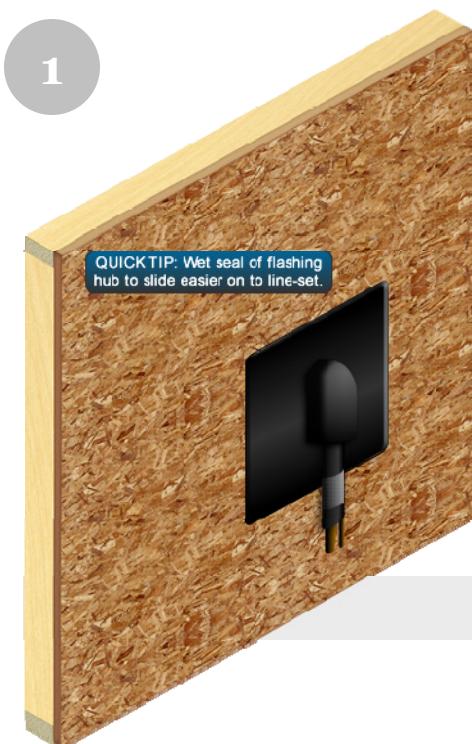

Slide Quickflash® panel  
onto line-set firmly  
pressing panel against the  
wall or studs.

2




Using non-corrosive fasteners, secure the Quickflash® panel to the structure from the mid-point of the panel to the top.

3



Slide the weather resistant barrier underneath the Quickflash® panel to the bottom of the line-set.

4

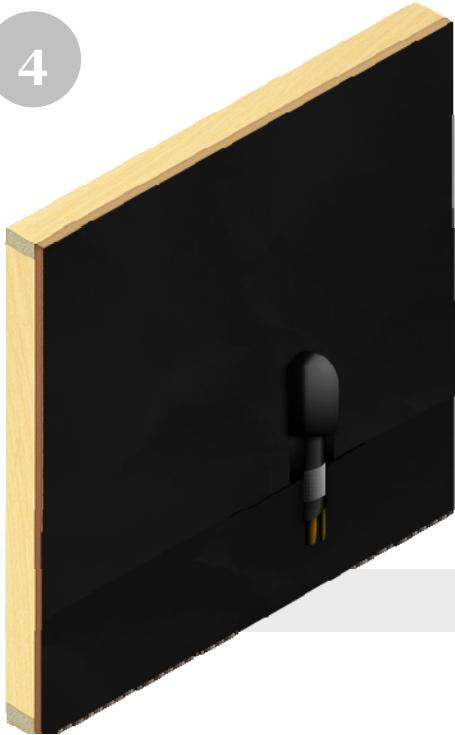

Install the weather  
resistant barrier carefully  
cutting an opening around  
the protruding line-set,  
over the top of  
Quickflash® panel using  
shingle style method  
extending to the bottom of  
the panel or further down.