




Installation Plumbing (Pre WRB)

IMPORTANT:
Always refer to house
wrap or building paper
manufacturers install
guidelines.

1

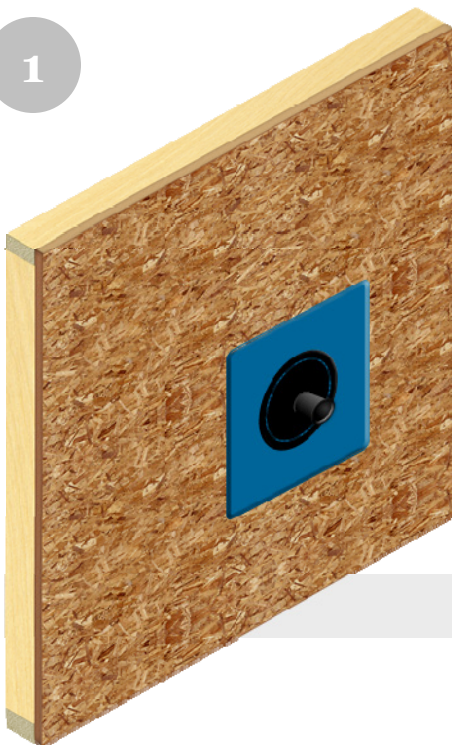


Slide Quickflash® panel
onto pipe firmly pressing
panel against the wall or
studs.

2




Optional-
Using non-corrosive
fasteners, secure the
Quickflash® panel to the
structure from the mid-
point of the panel to the
top.

3

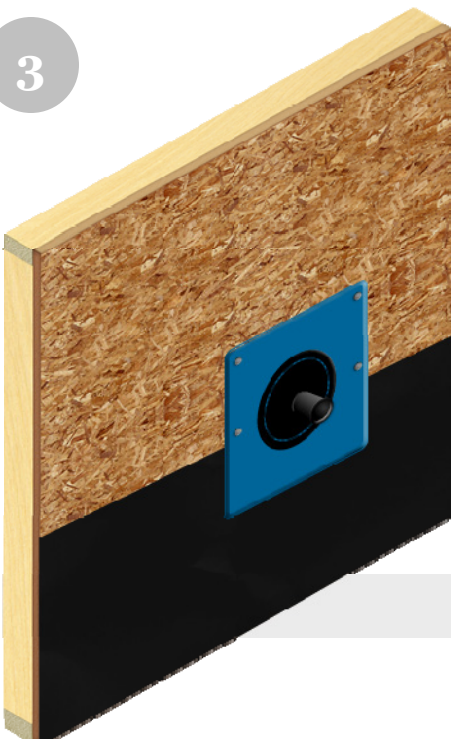

Slide the weather resistant
barrier underneath the
Quickflash® panel to the
bottom of the pipe.

4

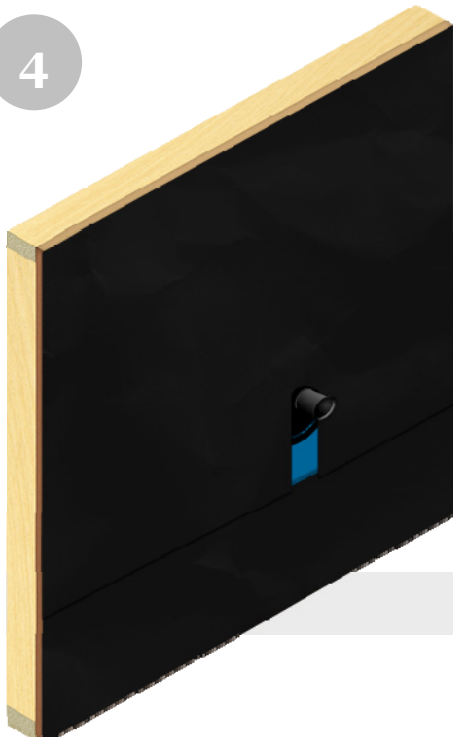

Install the weather resistant barrier carefully cutting an opening around the protruding pipe, over the top of Quickflash® panel using shingle style method extending to the bottom of flashing panel or further down.